



Gauge Adapter

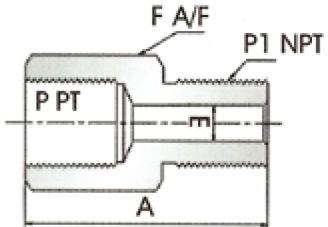


Part No	Pipe Size		Dimensions		
	P-PT, FF, BSPP	P1-PT, NPT	A	E	F
SGA-04-04	1/4 19	1/4	27.7	3.0	9/16
SGA-06-06	3/8 19	3/8	31.0	5.0	3/4
SGA-08-08	1/2 14	1/2	33.6	7.1	7/8

Reducing Bushing

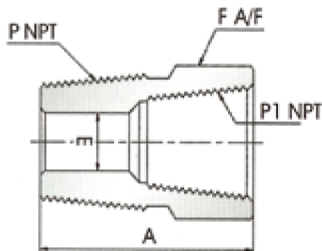

Part No	Pipe Size		Dimensions		
	P-PT, NPT	P1-PT, NPT	A	E	F
SRB-02-01	1/8	1/16	26.2	4.8	7/16
SRB-04-02	1/4	1/8	26.9	7.1	9/16
SRB-06-02	3/8	1/8	21.8	8.6	11/16
SRB-06-04	3/8	1/4	30.2	9.5	3/4
SRB-08-02	1/2	1/8	27.4	8.6	7/8
SRB-08-04	1/2	1/4	27.4	11.4	7/8
SRB-08-06	1/2	3/8	35.8	11.9	7/8
SRB-12-04	3/4	1/4	27.4	11.4	1 1/16
SRB-12-06	3/4	3/8	27.4	15.0	1 1/16
SRB-12-08	3/4	1/2	41.4	15.7	1 1/16
SRB-16-04	1	1/4	34.8	11.4	1 3/8
SRB-16-06	1	3/8	34.8	15.0	1 3/8
SRB-16-08	1	1/2	34.8	18.5	1 3/8
SRB-16-12	1	3/4	47.0	22.4	1 3/8

Pipe Cap

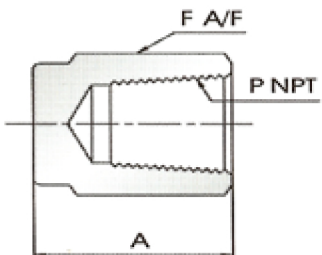

Part No	Pipe Size P-PT, NPT	Dimensions	
		A	F
SPC-02	1/8	19.1	9/16
SPC-04	1/4	23.1	3/4
SPC-06	3/8	26.2	7/8
SPC-08	1/2	34.0	1 1/16
SPC-12	1/2	36.6	1 5/16
SPC-16	1	41.1	1 5/8